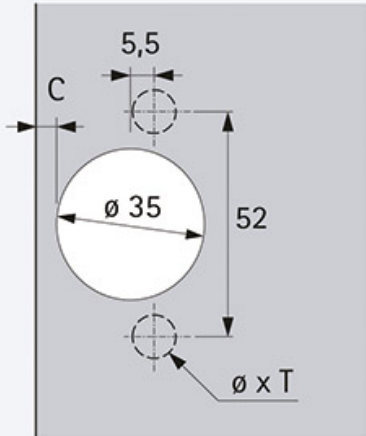
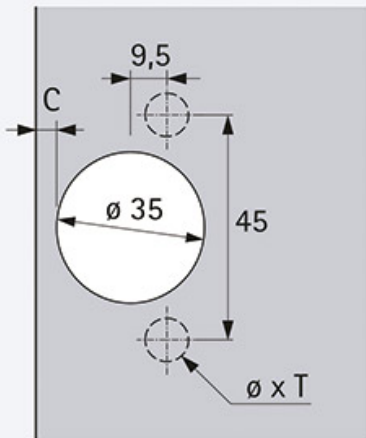


Montage du boîtier	Schéma de perçage	Alésage de fixation $\varnothing \times T$ mm
à visser TH 42	 <p>Diagram showing a circular hole with diameter $\varnothing 35$ and a vertical distance of 52 mm from the top edge to the center of the hole. A horizontal distance of 5,5 mm is shown from the center to the edge. A dimension 'C' is indicated for the offset. A smaller hole with diameter $\varnothing \times T$ is shown below the main hole.</p>	
à enfoncer TH 43		$\varnothing 10 \times 11$
Montage rapide Fix TH 45		$\varnothing 10 \times 6$
avec manchons à expansion prém. TH 48		$\varnothing 10 \times 11$
	 <p>Diagram showing a circular hole with diameter $\varnothing 35$ and a vertical distance of 45 mm from the top edge to the center of the hole. A horizontal distance of 9,5 mm is shown from the center to the edge. A dimension 'C' is indicated for the offset. A smaller hole with diameter $\varnothing \times T$ is shown below the main hole.</p>	
à enfoncer TB 43		$\varnothing 8 \times 11$
Montage rapide Fix TB 45		$\varnothing 8 \times 6$
avec manchons à expansion prém. TB 48		$\varnothing 8 \times 11$

<https://www.qama.fr/intermat-9936-w45-p28089>